


YI Action Camera 4K User Manual


SIZE:90X90mm

Front:





Thank you for choosing YI Action Camera 4K

1.Camera kit

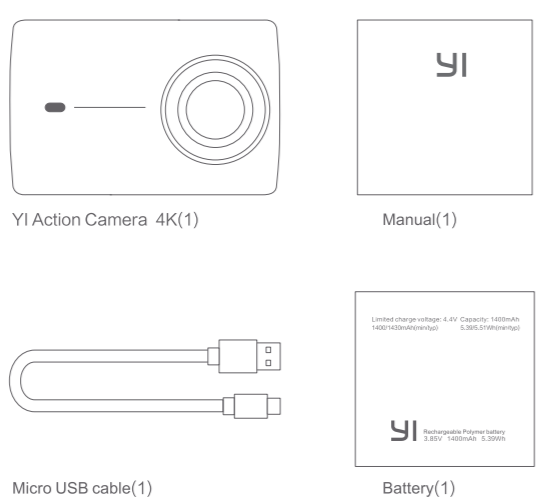


2. Getting to know the camera

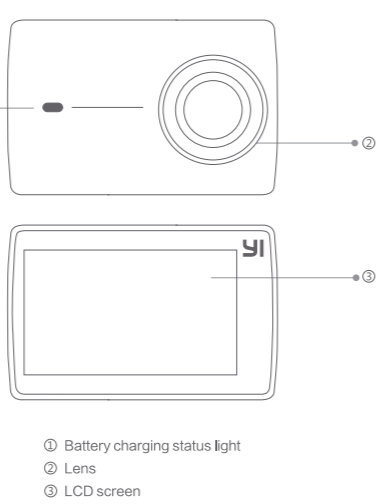

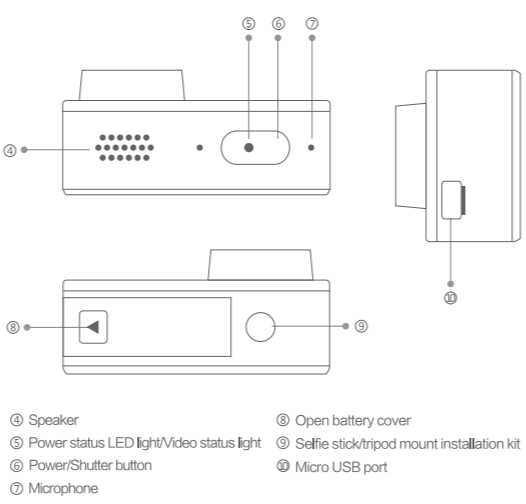


3.Insert/Remove Micro SD card(sold separately)

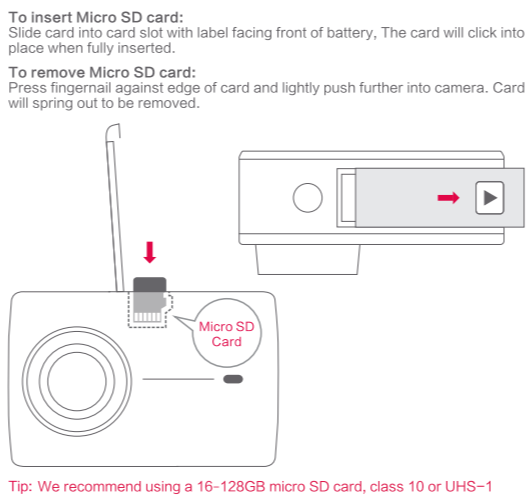

To insert Micro SD card:
1. Place card in the slot with label facing front of battery. The card will drop into place when fully inserted.
To remove Micro SD card:
1. Press finger nail against edge of card and lightly push further into camera. Card will spring out to be removed.


Tip: We recommend using a 16-128GB micro SD card, class 10 or UHS-1

4.Insert/Remove the battery

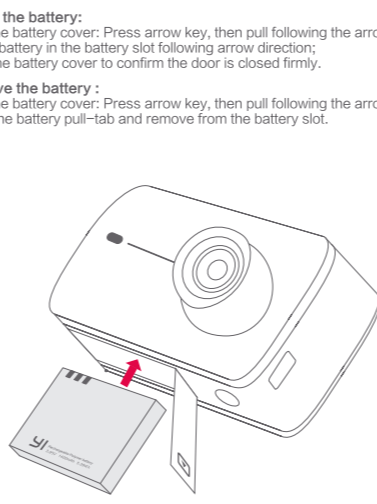


To insert the battery:
1. Press arrow key, then pull following the arrow direction.
2. The camera will be powered off and displaying using a computer.
3. Close the battery cover to confirm the door is closed firmly.
To remove the battery:
1. Press arrow key, then pull following the arrow direction.
2. Grasp the battery pull-tab and remove from the battery slot.

5.Charge the battery

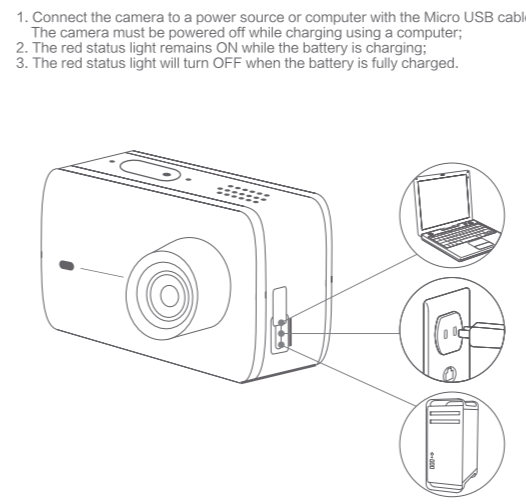


1. Connect the camera to a power source or computer with the Micro USB cable.
2. The camera will be powered off and displaying using a computer.
3. The red status light remains ON until the battery is fully charged.

6.How to use the camera

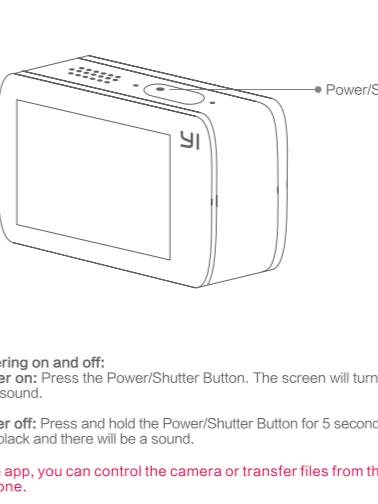

1) Powering on and off:
To power on: Press the Power/Shutter Button. The screen will turn on and there will be a sound.
To power off: Press and hold the Power/Shutter Button for 5 seconds. The screen will turn black and there will be a sound.
With the app, you can control the camera or transfer files from the camera to your phone.

7) Connect to YI Action Camera App

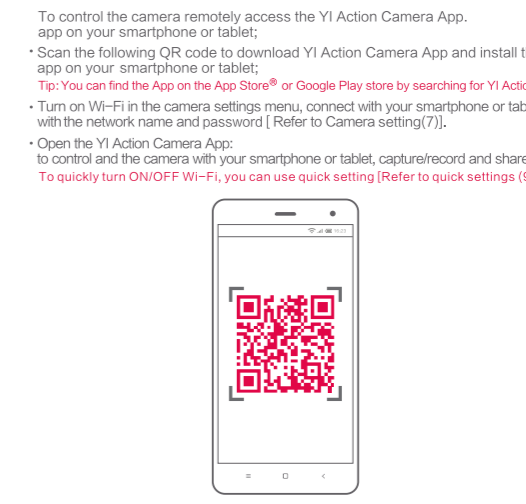


To control the camera remotely access the YI Action Camera App.
1. Scan the QR code to download YI Action Camera App and install the app on your smartphone or tablet.
2. Turn on Wi-Fi in the camera settings menu, connect with your smartphone or tablet with the network name and password (Refer to Camera settings/7).
3. Open the YI Action Camera App.
4. Access the camera with your smartphone or tablet, capture/record and share photos/videos.
5. Access the camera with your smartphone or tablet, capture/record and share photos/videos.


3) Firmware update
The most current camera firmware will be downloaded automatically after you finish your first connection with your smartphone and camera. For the best performance, please use the most updated version.
Update through the App: Make sure the camera is connected to a power source or has more than 50% battery life.

Back:


4) Home display

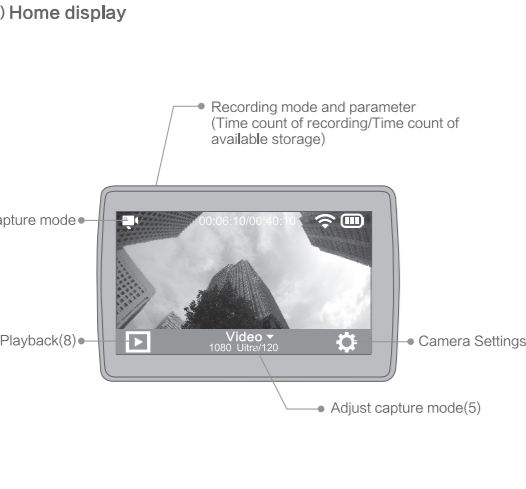

Icon Glossary

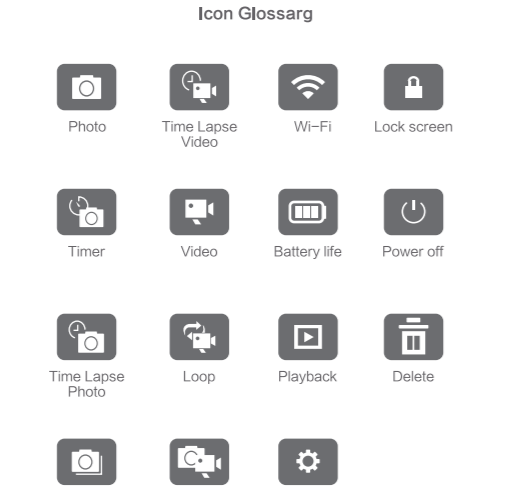


5) Adjusting the capture mode

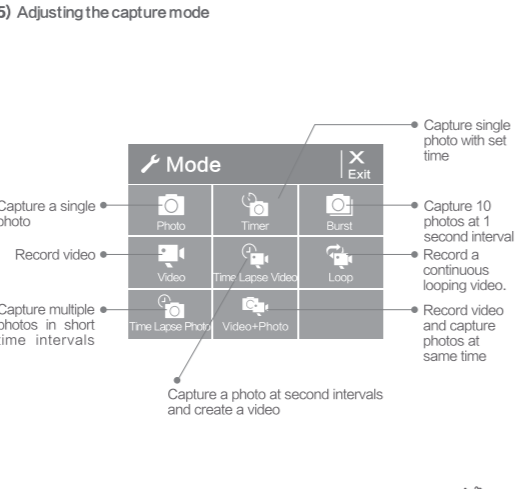


Slide up or down to review all modes, then select the desired mode.

6) Capture preferences

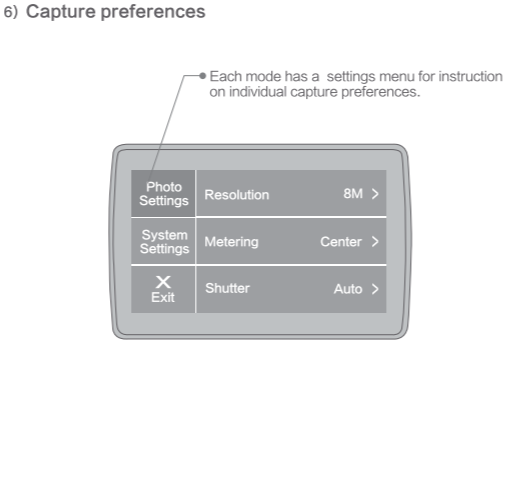


Each mode has a settings menu for instruction on individual capture preferences.

7) System settings

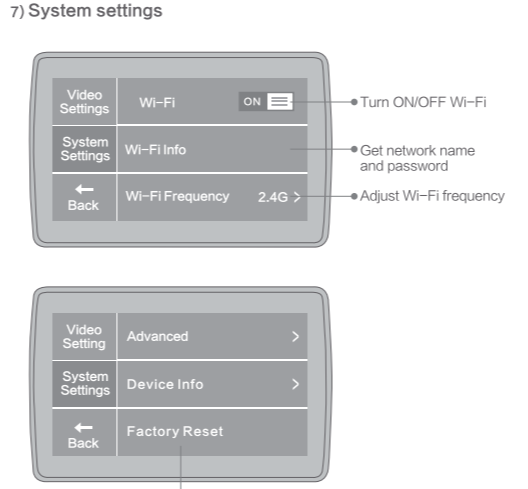


Reset your settings to factory default.

8) Playback photos and videos

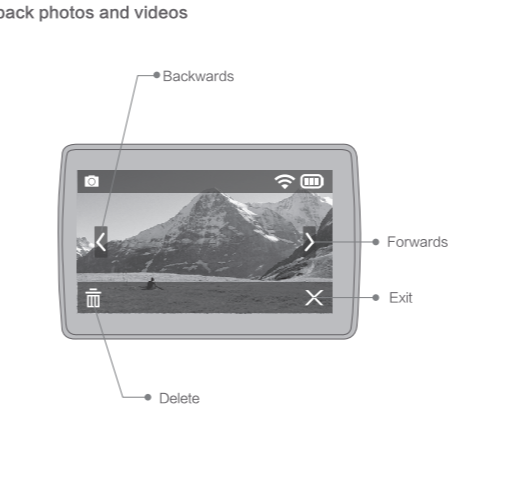


Tip: Burst and Time lapse files will display as the first photos in the series.

9) Quick settings

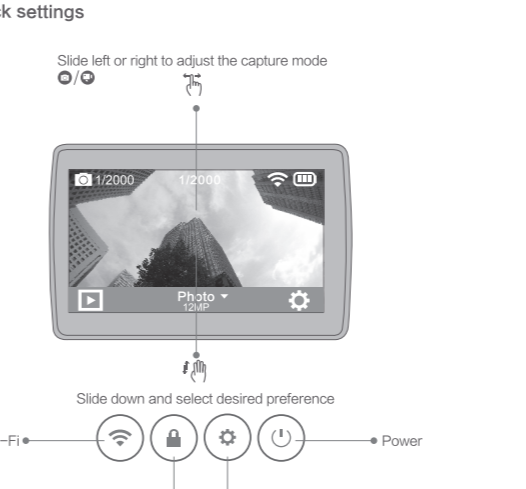

10) Upload files

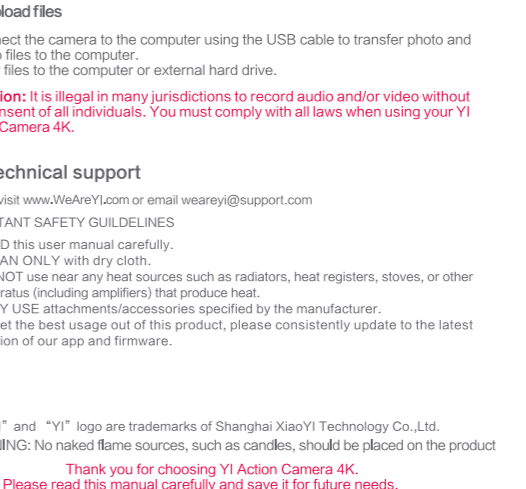

1. Connect the camera to the computer using the USB cable to transfer photo and video files to the computer.
2. Copy files to the computer or external hard drive.

Attention: It is illegal in many jurisdictions to record audio and/or video without the consent of all individuals. You must comply with all laws when using your YI Action Camera 4K.

11) Technical support
Please visit www.yicamera.com or email www@yicamera.com
IMPORTANT SAFETY GUIDELINES
1. READ the user manual carefully.
2. CLEAN ONLY with dry cloth.
3. DO NOT use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. ONLY USE electrical accessories specified by the manufacturer.
5. To get the best usage out of this product, please consistently update to the latest version of our app and firmware.
Thank you for choosing YI Action Camera 4K.
www.yicamera.com

The device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS (Canadian). Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR/émissions Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire d'interférence nuisible et (2) l'appareil doit accepter toute interférence radio qu'il peut recevoir, y compris celle qui peut causer une perturbation indésirable.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with RF specifications when used near your head or body. This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (FCC). The SAR limit established by the FCC is 1.6 W/kg averaged over one gram of tissue. The highest SAR value recorded by the FCC for this device complies with the FCC SAR limit. The highest SAR value recorded by the FCC for the device type when using all the listed cases (10g) and when properly worn on the body is 0.230 W/kg.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Le présent appareil est conforme aux normes applicables de la Commission canadienne des radiocommunications (CCIR) pour les appareils radio exempts de licence. L'appareil est conçu pour répondre aux exigences de l'exposition aux ondes radioélectriques établies par la Commission canadienne des radiocommunications (CCIR). La valeur maximale de SAR enregistrée par la CCIR pour cet appareil est de 1,6 W/kg en moyenne sur un gramme de tissu. La valeur maximale de SAR enregistrée par la CCIR pour ce type d'appareil, lorsqu'il est utilisé avec tous les casques énumérés (10g) et lorsqu'il est porté correctement sur le corps, est de 0,230 W/kg.

ATTENTION: RISQUE D'EXPLOSION EN CAS D'UN REMPLACEMENT DE LA BATTERIE PAR UN TYPE INAPPRÉPRIÉ. ÉLIMINEZ LES BATTERIES USÉES SELON LES INSTRUCTIONS.

© 1313
YI Action Camera